


## Fitting the bias tee with N connectors

**Serendipity strikes the bias tee!** As you are aware, I screwed up the PCB design for the bias tee making it a little short of the standard Schuberth tin box. I just discovered that if you fit standard N connectors instead of SMAs it fits the box exactly! (see below.)

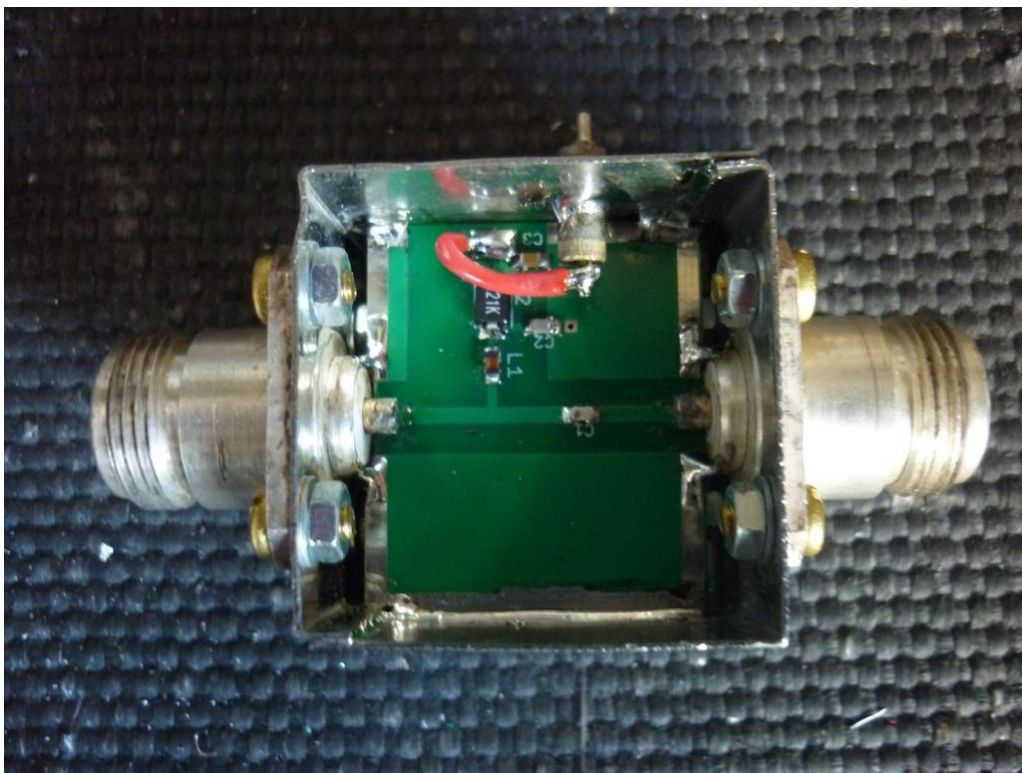

Do remember to solder the PCB ground plane to the connector, and you have to trim the lids a little .